

ВЫХОДНЫЕ СИГНАЛЫ разъём X07

Базовый адрес 120 NEX

P/K(WL4) DB25F	№ Бита	Примечание
X7/01	+24 В	
X7/02	22	
X7/03	20	
X7/04	18	
X7/05	16	
X7/06	14	
X7/07	12	
X7/08	10	
X7/09	08	
X7/10	06	
X7/11	04	
X7/12	02	
X7/13	00	
X7/14	23	
X7/15	21	
X7/16	19	
X7/17	17	
X7/18	15	
X7/19	13	
X7/20	11	
X7/21	09	
X7/22	07	
X7/23	05	
X7/24	03	
X7/25	01	

ВЫХОДНЫЕ СИГНАЛЫ разъём X08

P/K(WL4) DB25F	№ Бита	Примечание
X8/01	+24 В	
X8/02	46	
X8/03	44	
X8/04	42	
X8/05	40	
X8/06	38	
X8/07	36	
X8/08	34	
X8/09	32	
X8/10	30	
X8/11	28	
X8/12	26	
X8/13	24	
X8/14	47	
X8/15	45	
X8/16	43	
X8/17	41	
X8/18	39	
X8/19	37	
X8/20	35	
X8/21	33	
X8/22	31	
X8/23	29	
X8/24	27	
X8/25	25	

ВХОДНЫЕ СИГНАЛЫ разъем № X9

Р/К(WL4) DB37F	№ Бита	Примечание
X9/01	0 В	
X9/02	0 В	
X9/03	-----	
X9/04	30	
X9/05	28	
X9/06	26	
X9/07	24	
X9/08	22	
X9/09	20	
X9/10	18	
X9/11	16	
X9/12	14	
X9/13	12	
X9/14	10	
X9/15	08	
X9/16	06	
X9/17	04	
X9/18	02	
X9/19	00	
X9/20	0 В	
X9/21	0 В	
X9/22	31	
X9/23	29	
X9/24	27	
X9/25	25	
X9/26	23	
X9/27	21	
X9/28	19	
X9/29	17	
X9/30	15	
X9/31	13	
X9/32	11	
X9/33	09	
X9/34	07	
X9/35	05	
X9/36	03	
X9/37	01	

ВХОДНЫЕ СИГНАЛЫ разъем № X10

P/K(WL4) DB37F	№ Бита	Примечание
X10/01	0 В	
X10/02	0 В	
X10/03	-----	
X10/04	62	
X10/05	60	
X10/06	58	
X10/07	56	
X10/08	54	
X10/09	52	
X10/10	50	
X10/11	48	
X10/12	46	
X10/13	44	
X10/14	42	
X10/15	40	
X10/16	38	
X10/17	36	
X10/18	34	
X10/19	32	
X10/20	0 В	
X10/21	0 В	
X10/22	63	
X10/23	61	
X10/24	59	
X10/25	57	
X10/26	55	
X10/27	53	
X10/28	51	
X10/29	49	
X10/30	47	
X10/31	45	
X10/32	43	
X10/33	41	
X10/34	39	
X10/35	37	
X10/36	35	
X10/37	33	